




TOKYO BED




Thank you for choosing our new Tokyo Bed.
This practical design offers the utmost in versatilly.

HARDWARE

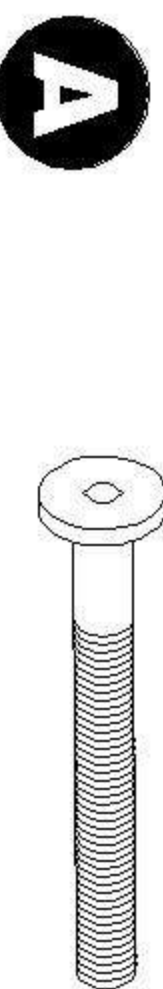

Bolt M6x50mm -4pcs

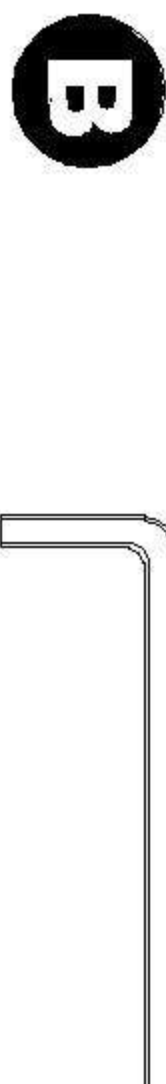

Allen Key 4mm -1pcs




Cross Dowel -2pcs



Wooden Dowel 8mm -4pcs
(the small size for attach the leg support (05))



Wooden Dowel 10mm -16pcs
(the big size for slat (7) and center support (4))

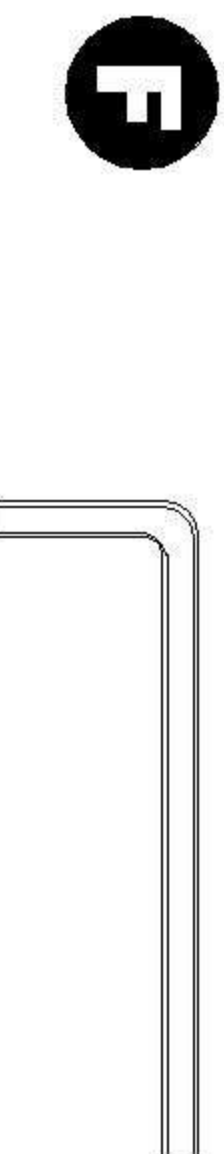

Allen Key 5mm -1pcs



Bolt M8x40mm -8pcs






Washer M8 -8pcs





ASSEMBLY INSTRUCTIONS

Before assembling your Tokyo bed, please read through these instructions carefully, familiarising yourself with the different parts.
please note that you will require Allen Key.

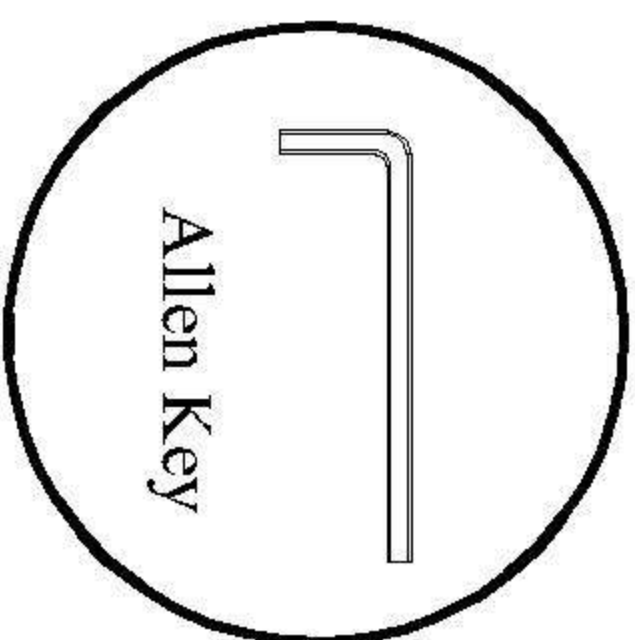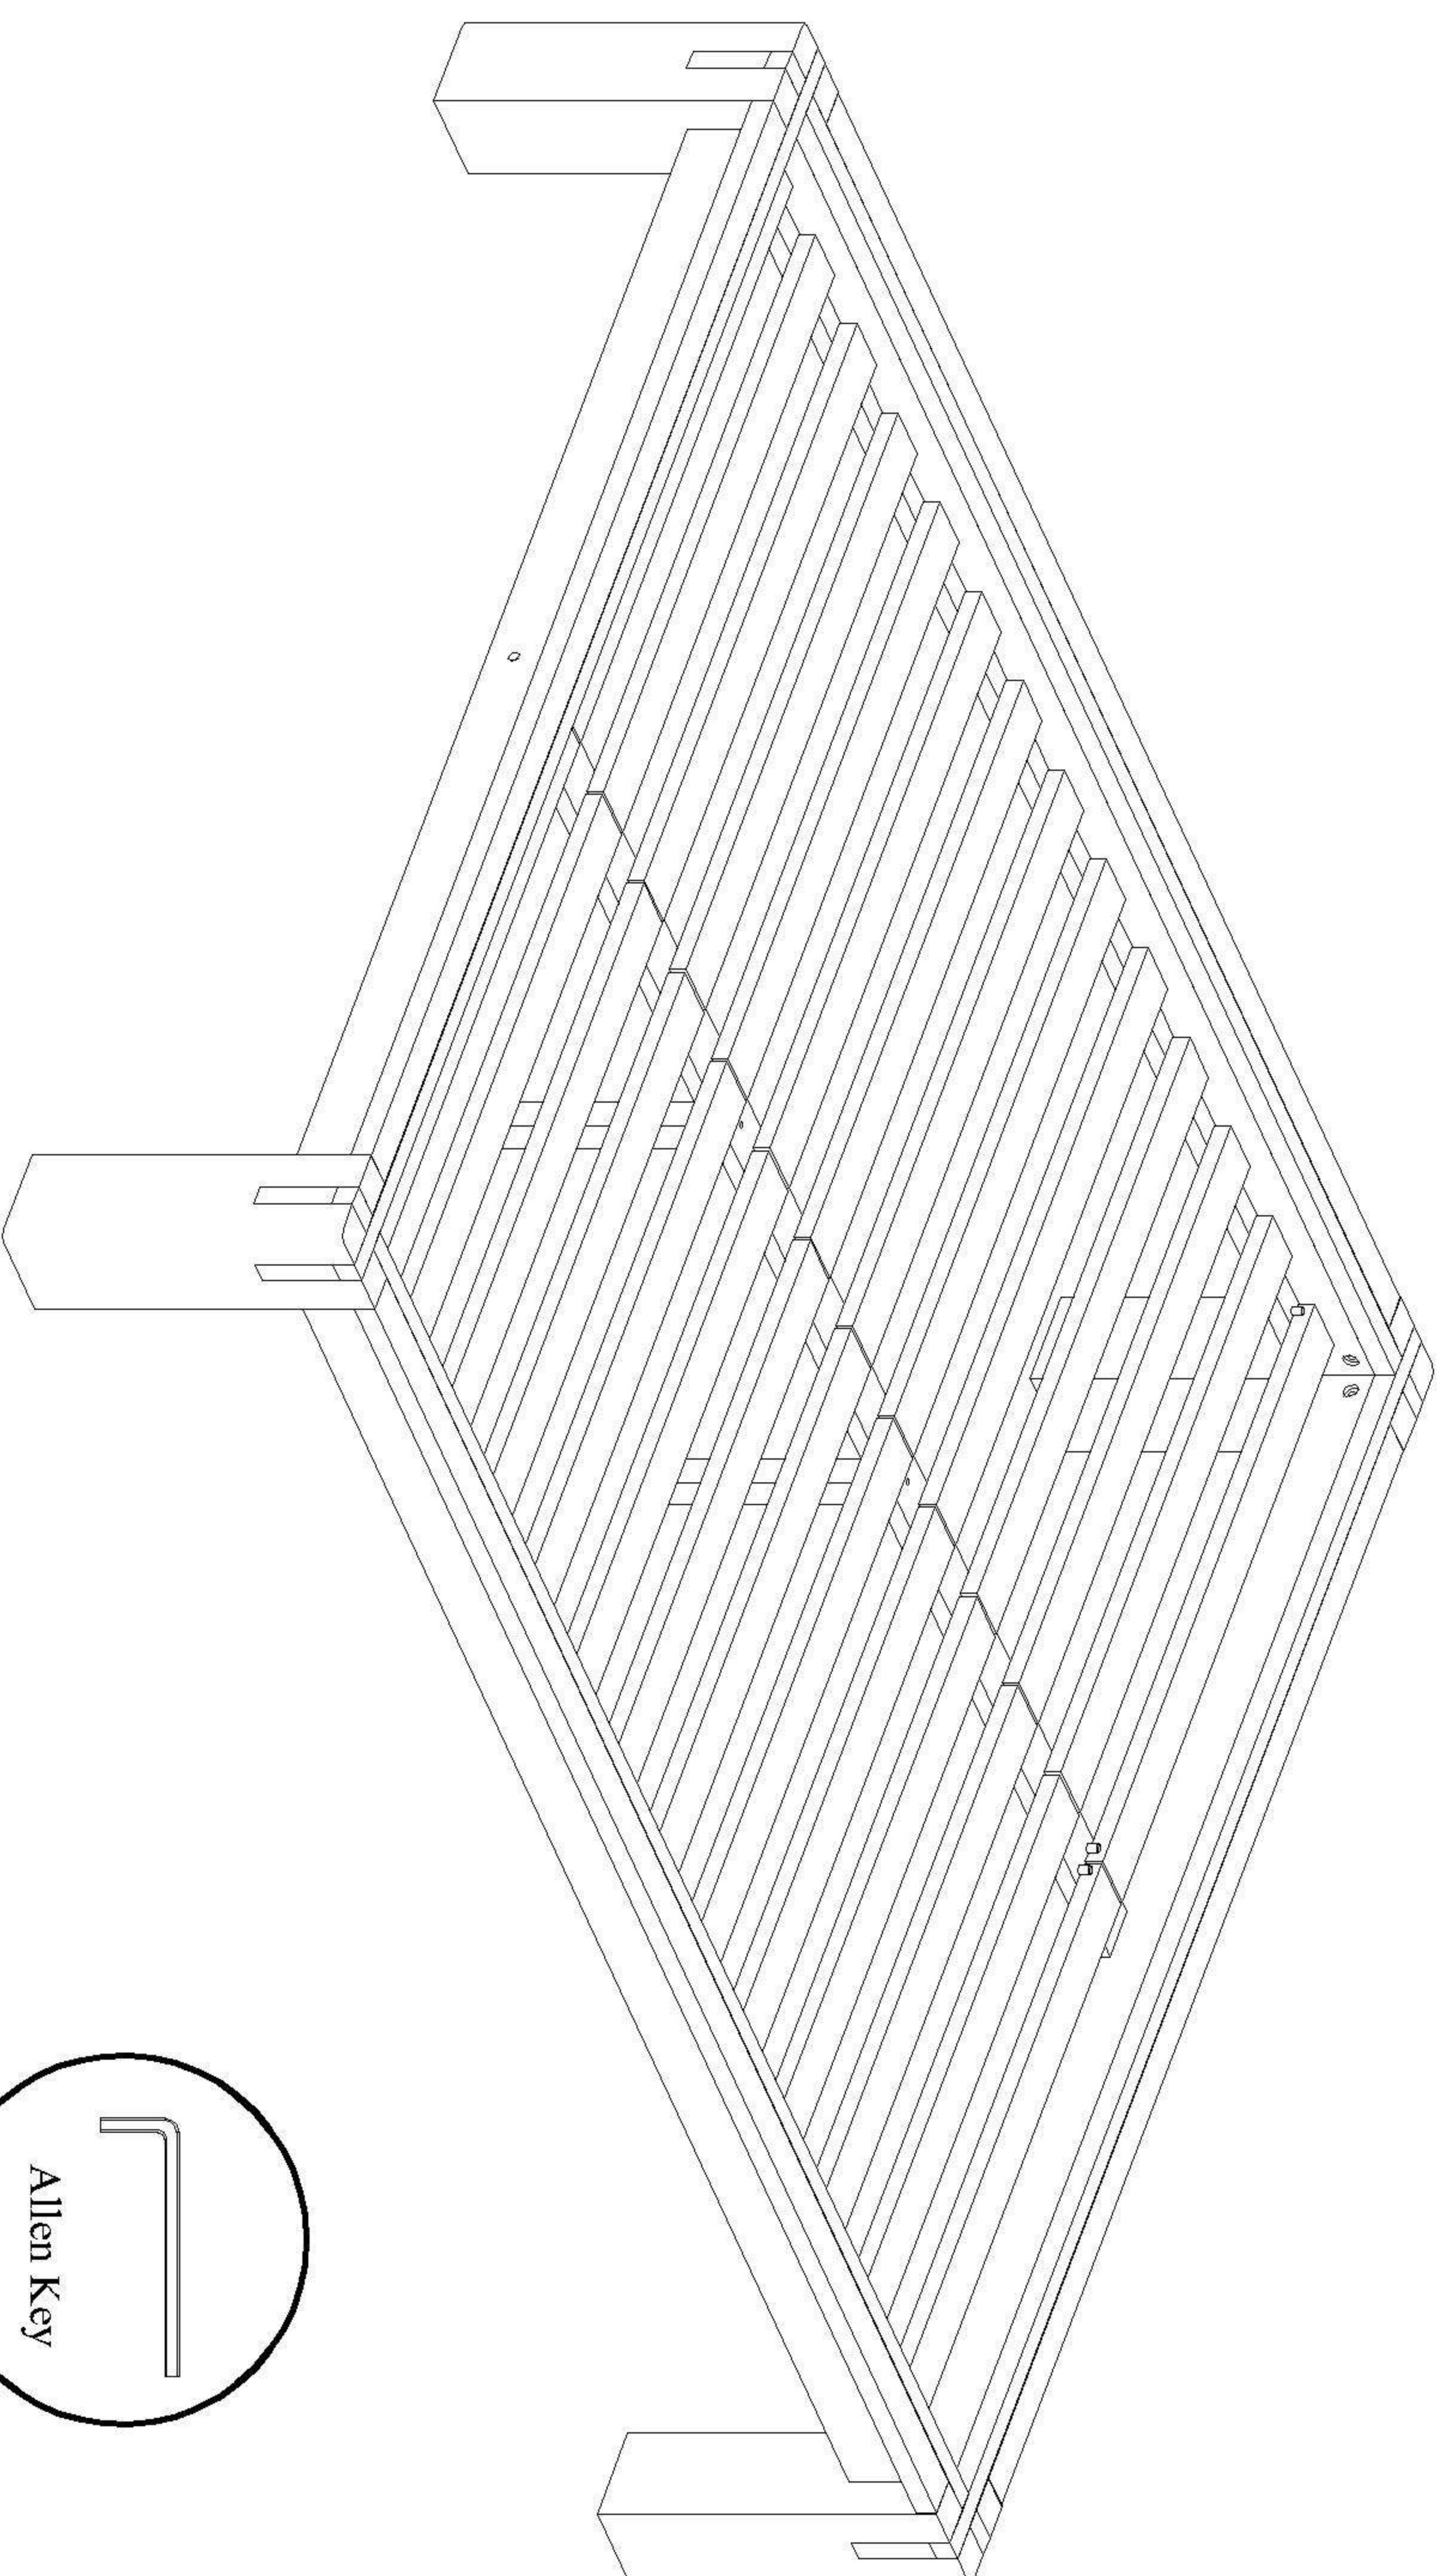


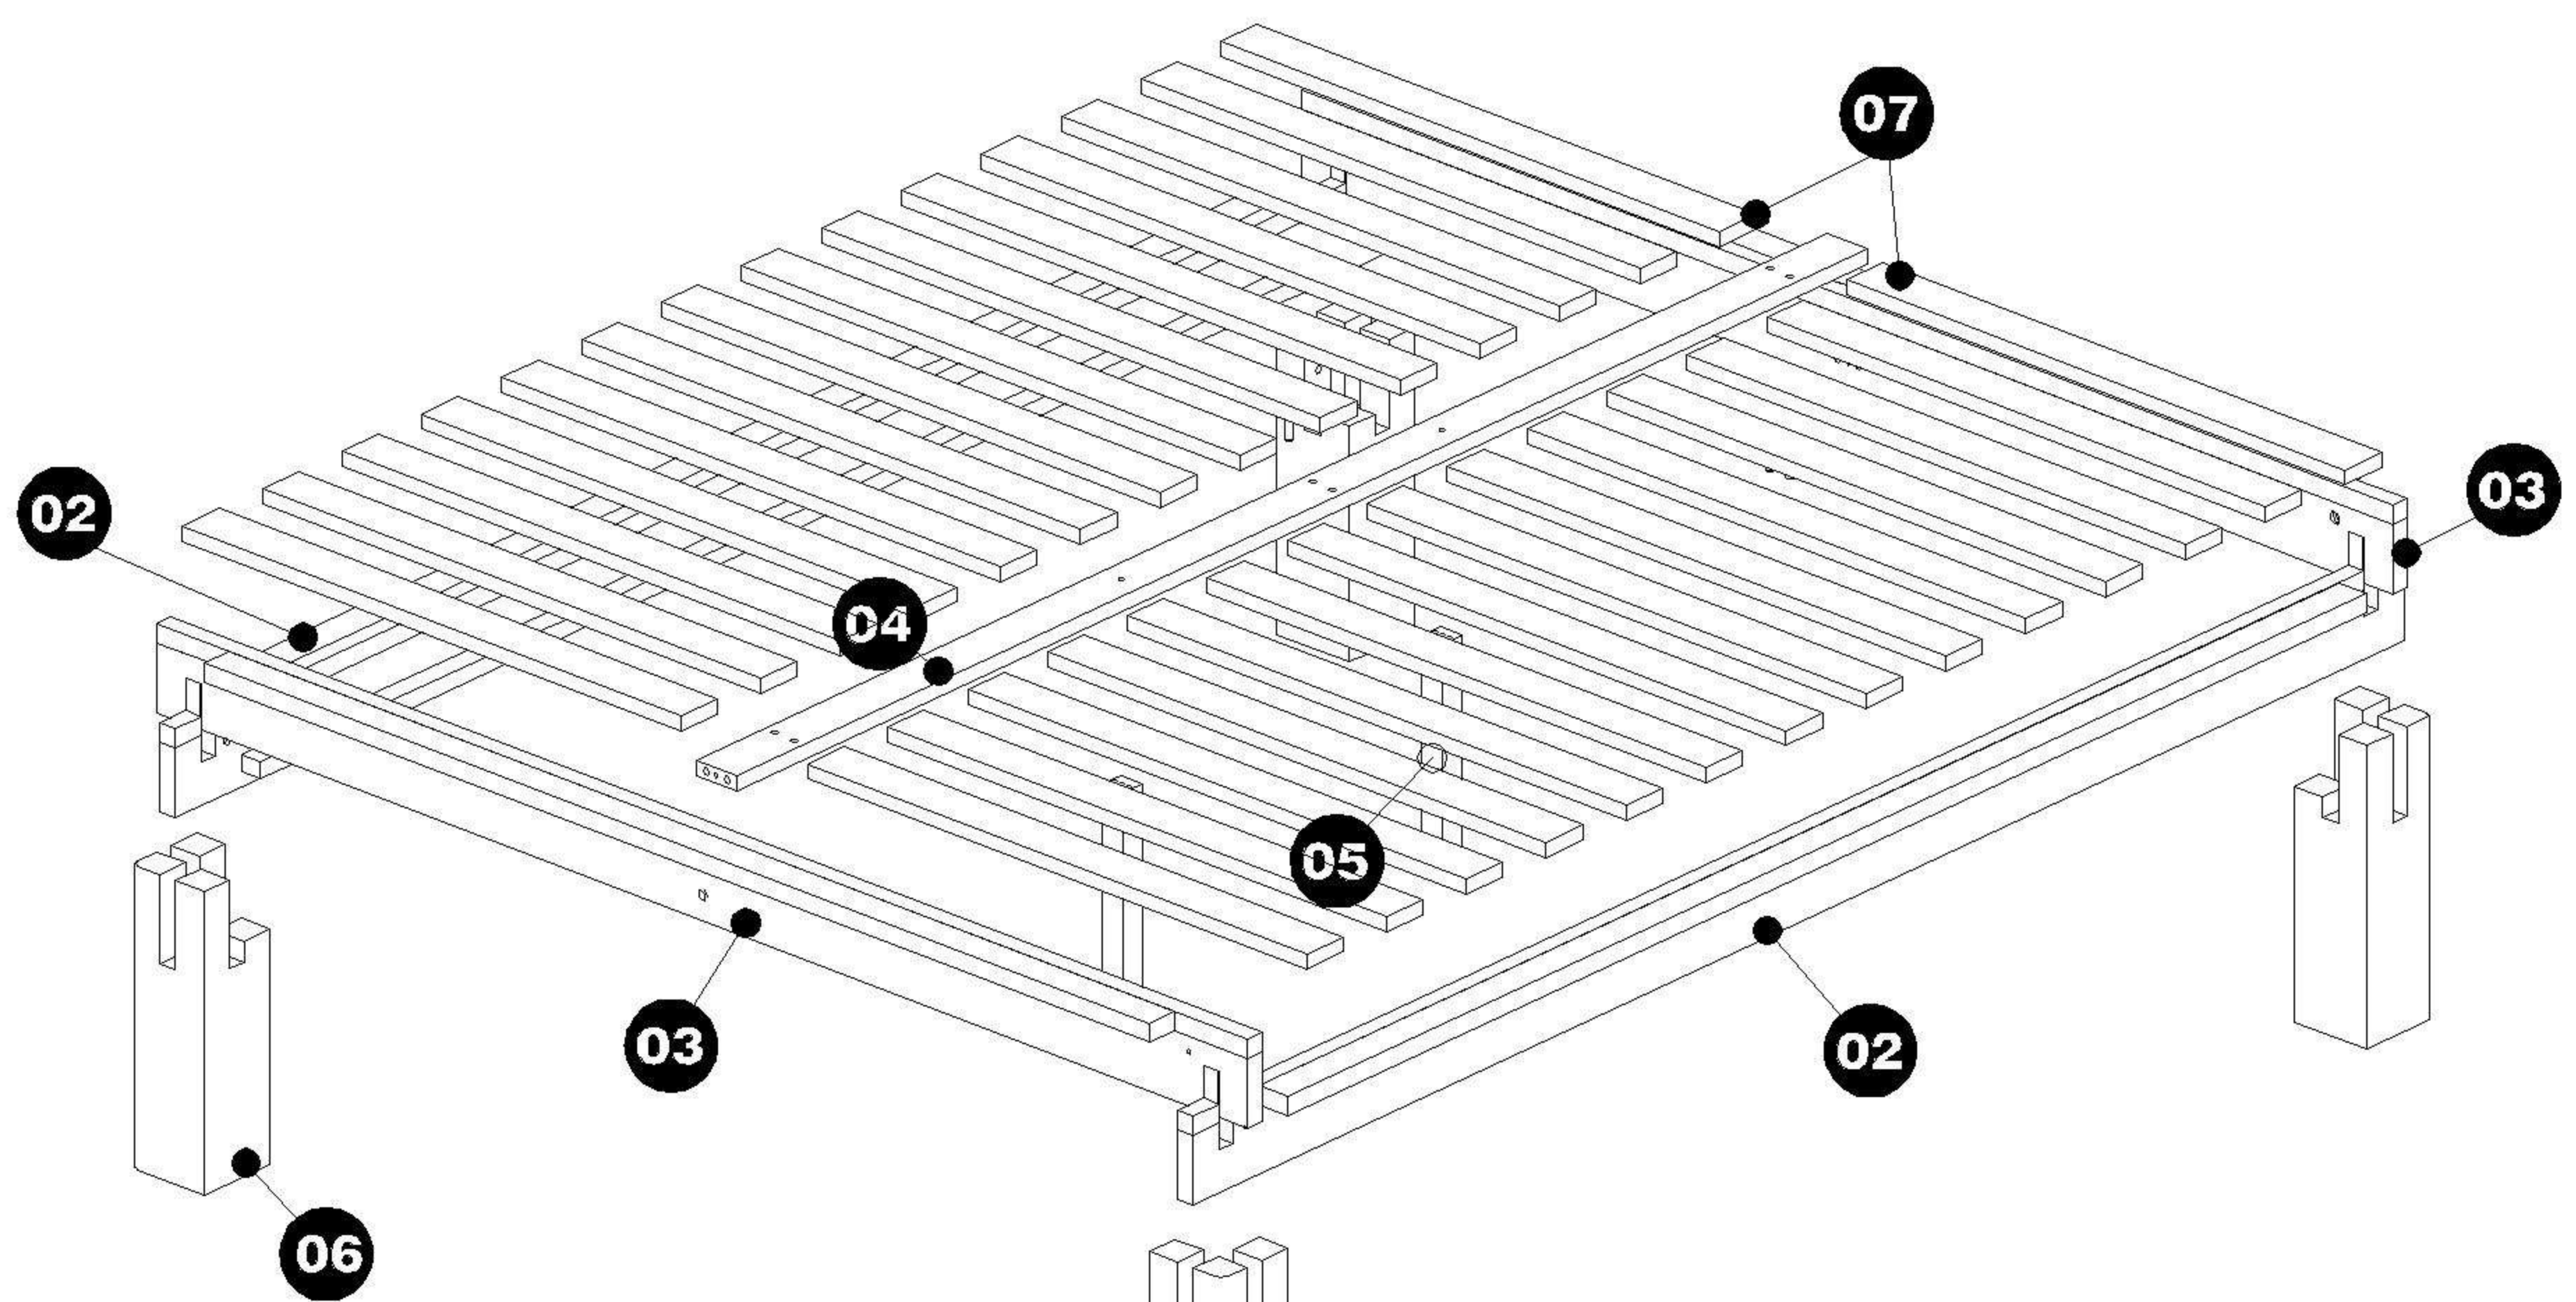

- 01** HARDWARE
- 02** LONG RAIL
- 03** END CAP
- 04** CENTER SUPPORT
- 05** LEG SUPPORT
- 06** LEG
- 07** SLAT KIT

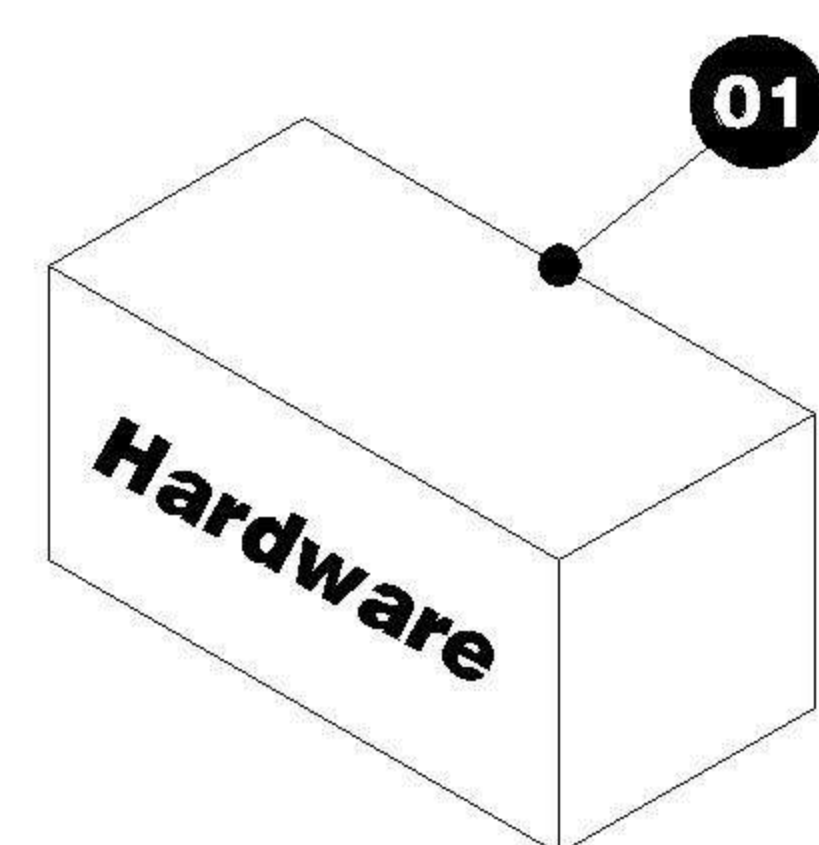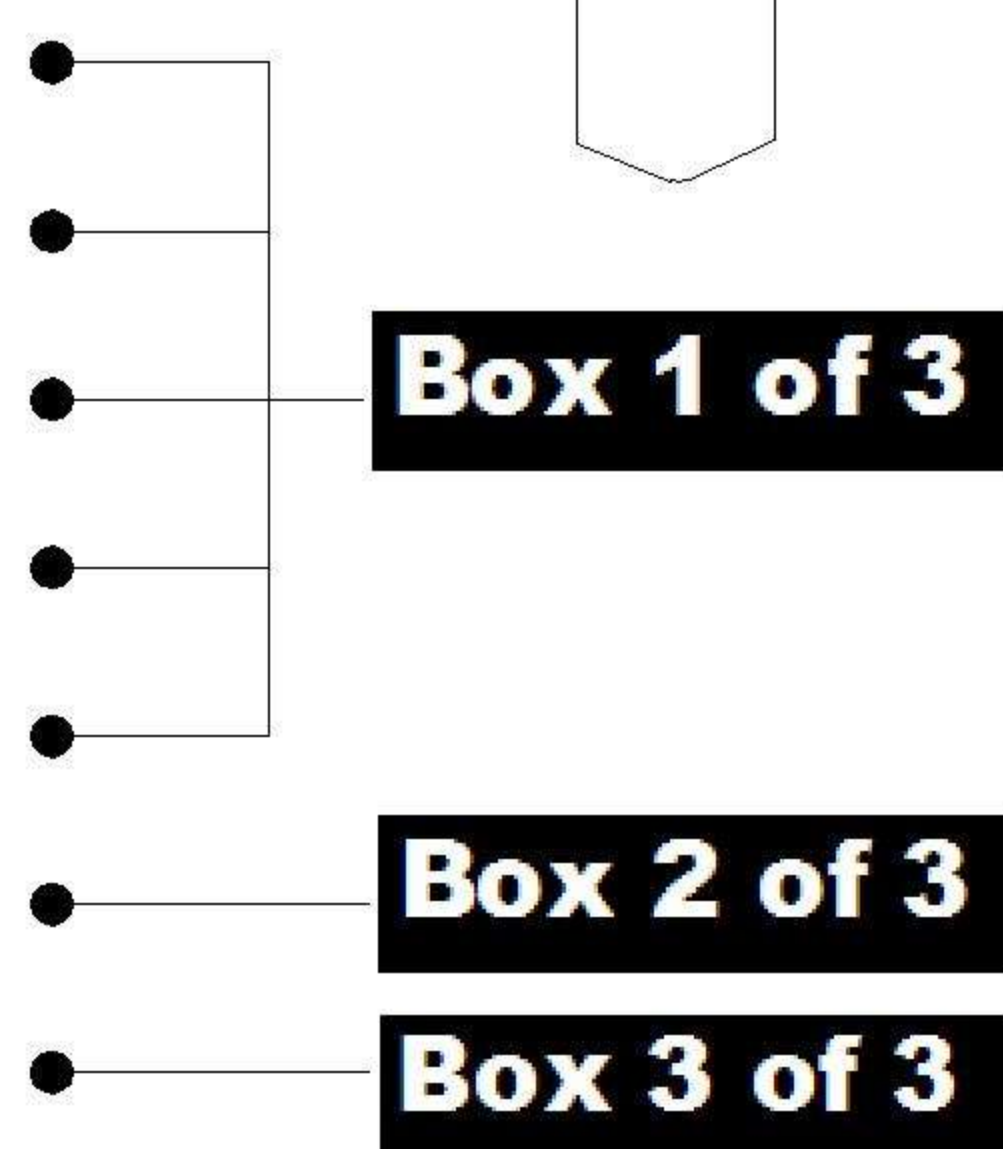


STEP 1

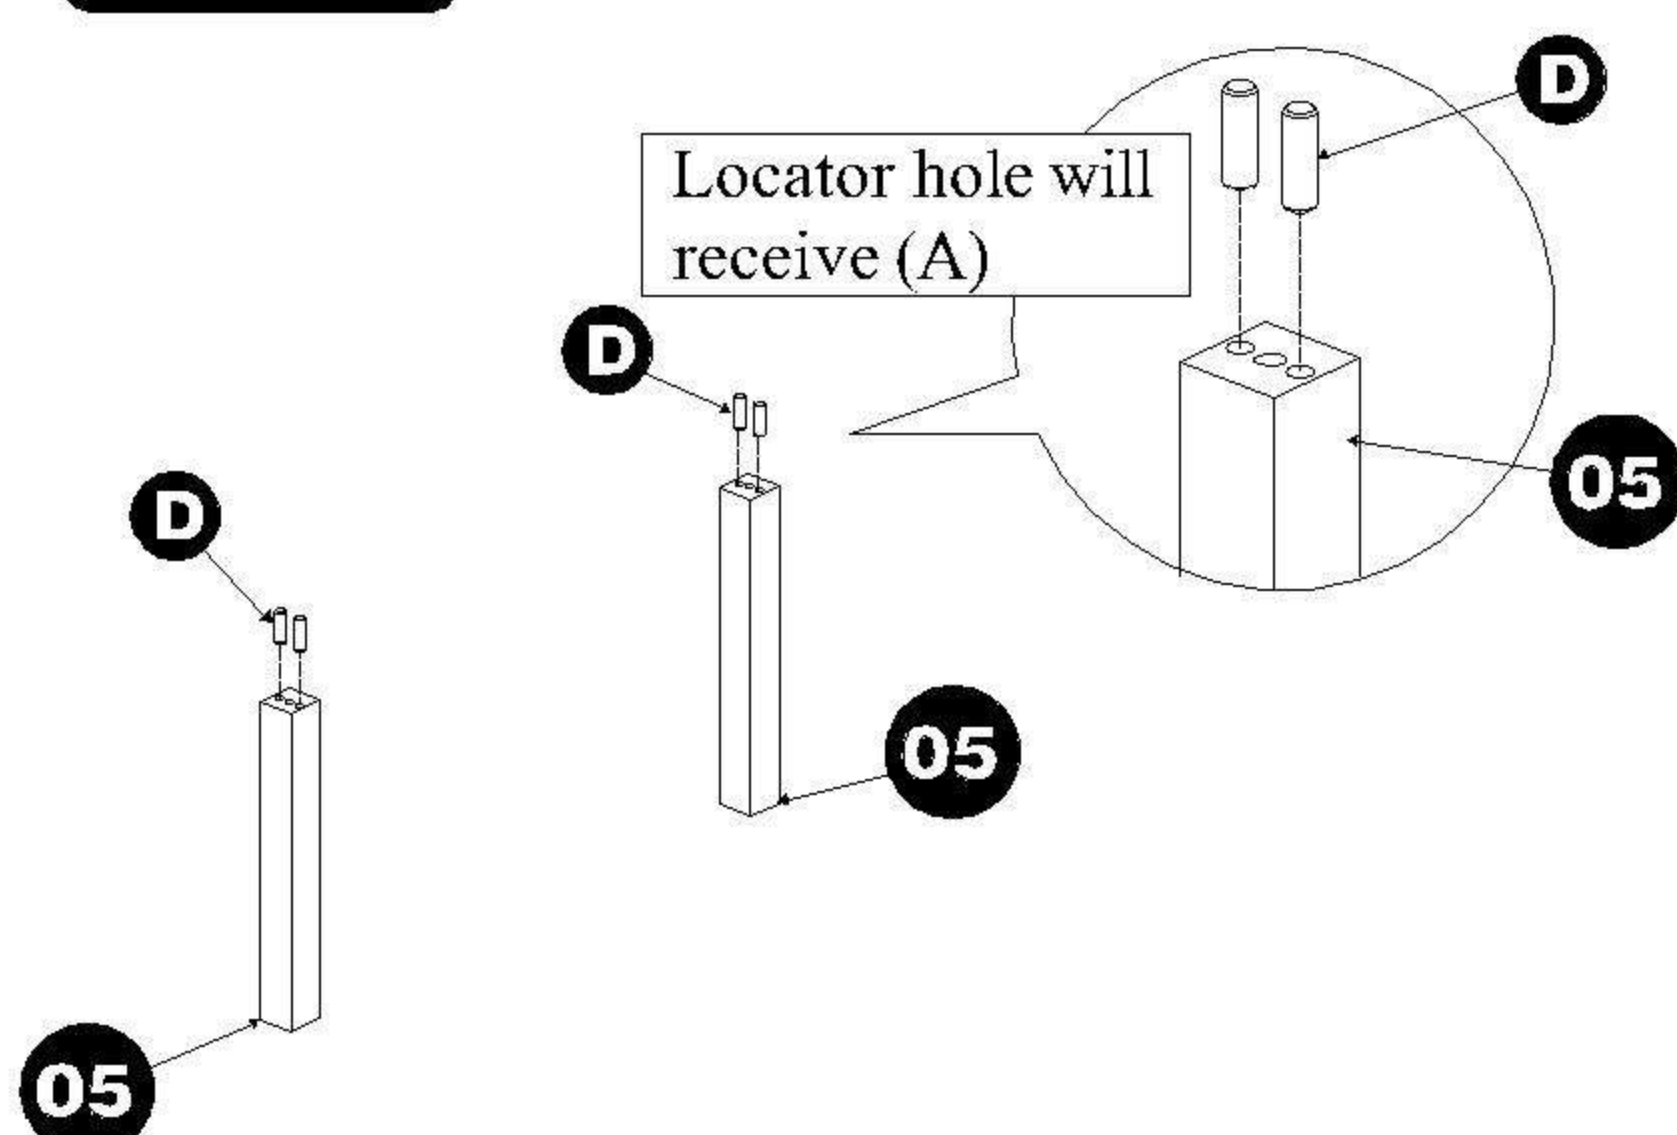


Insert Wooden Dowel (D),
into the receiving hole of Leg Supports (05) as shown

STEP 2

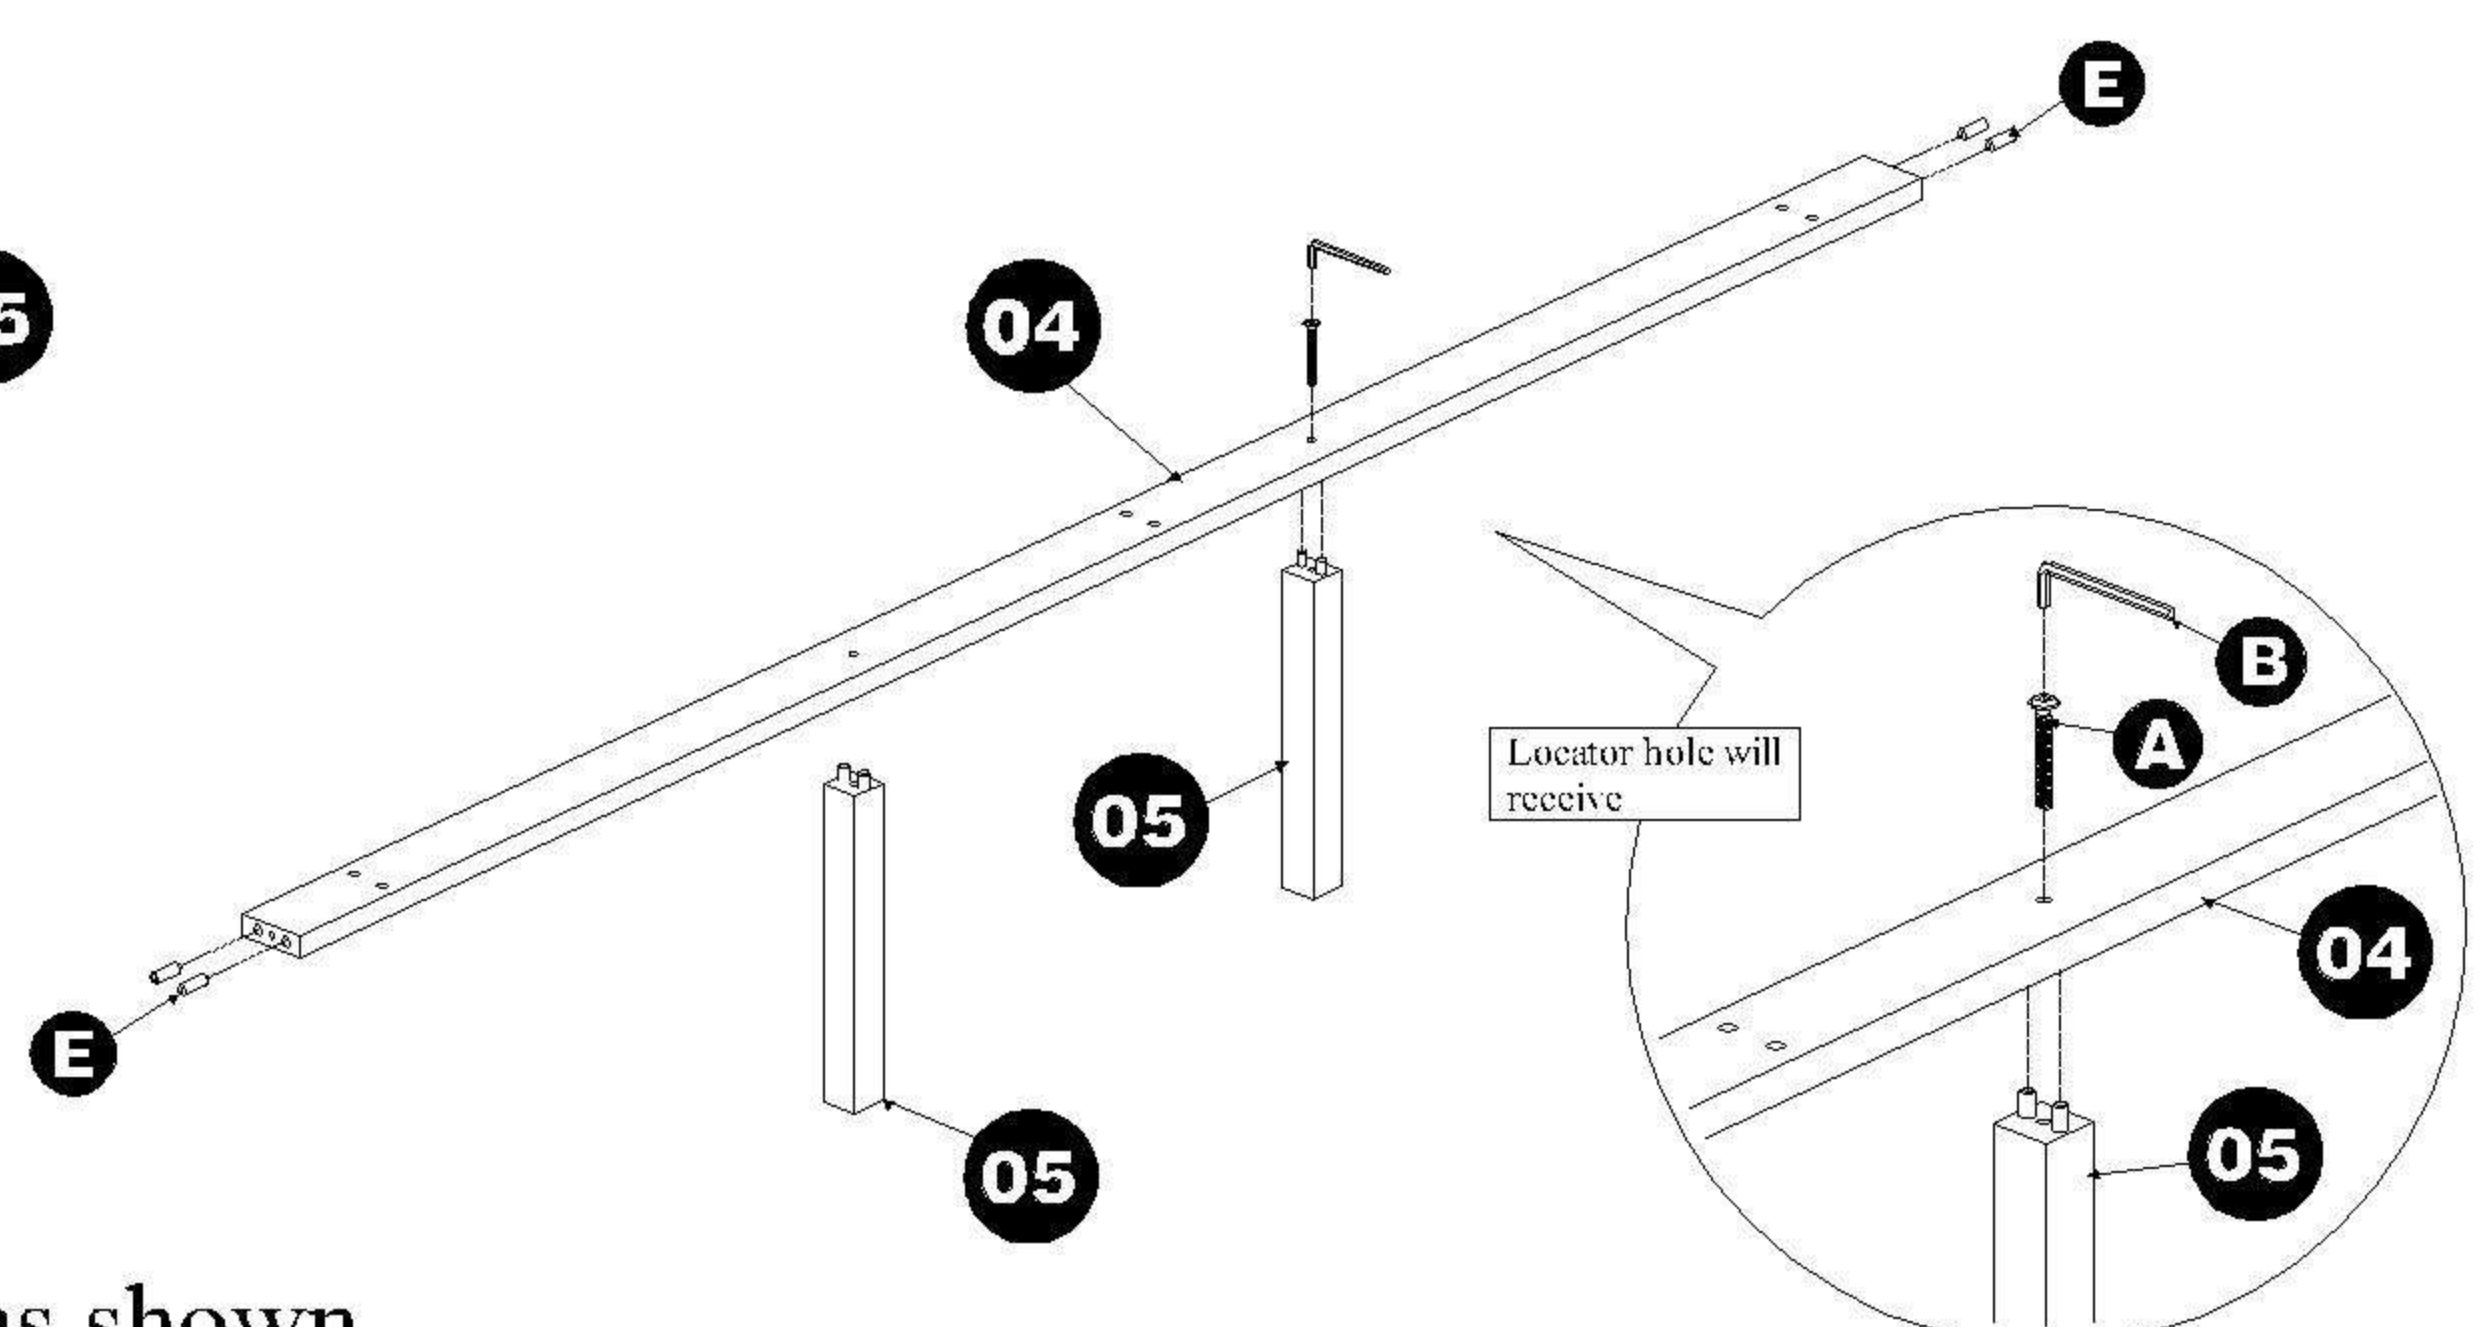

Insert Wooden Dowel 10mm (E),
to each end side of Center Support (4)



Attach Leg Support (05) to Center Support (04),
using Bolt M6 (A) tighten with Allen Key 4mm (B)

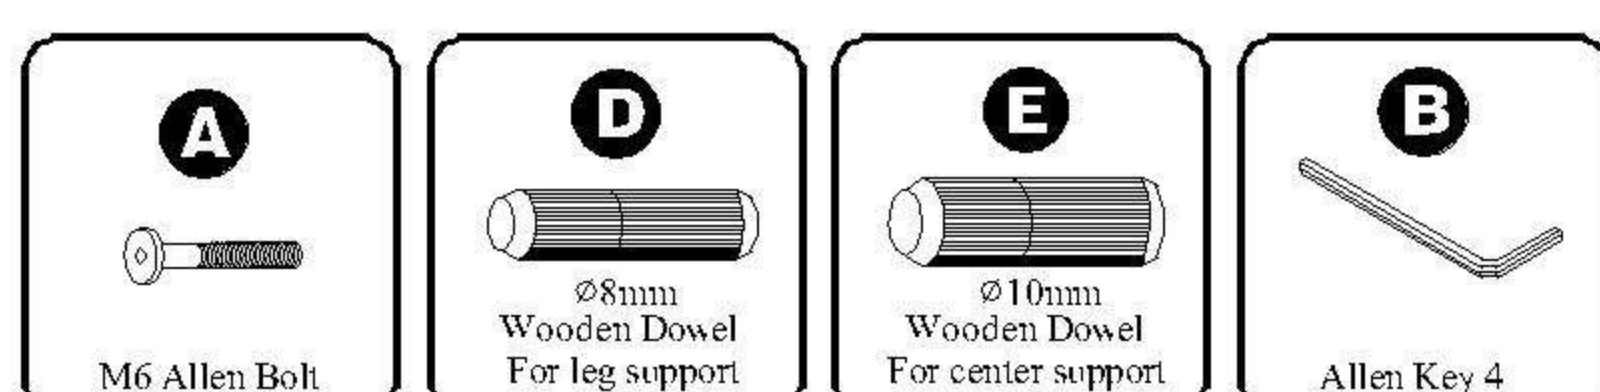

STEP 2



Assembling by Adult

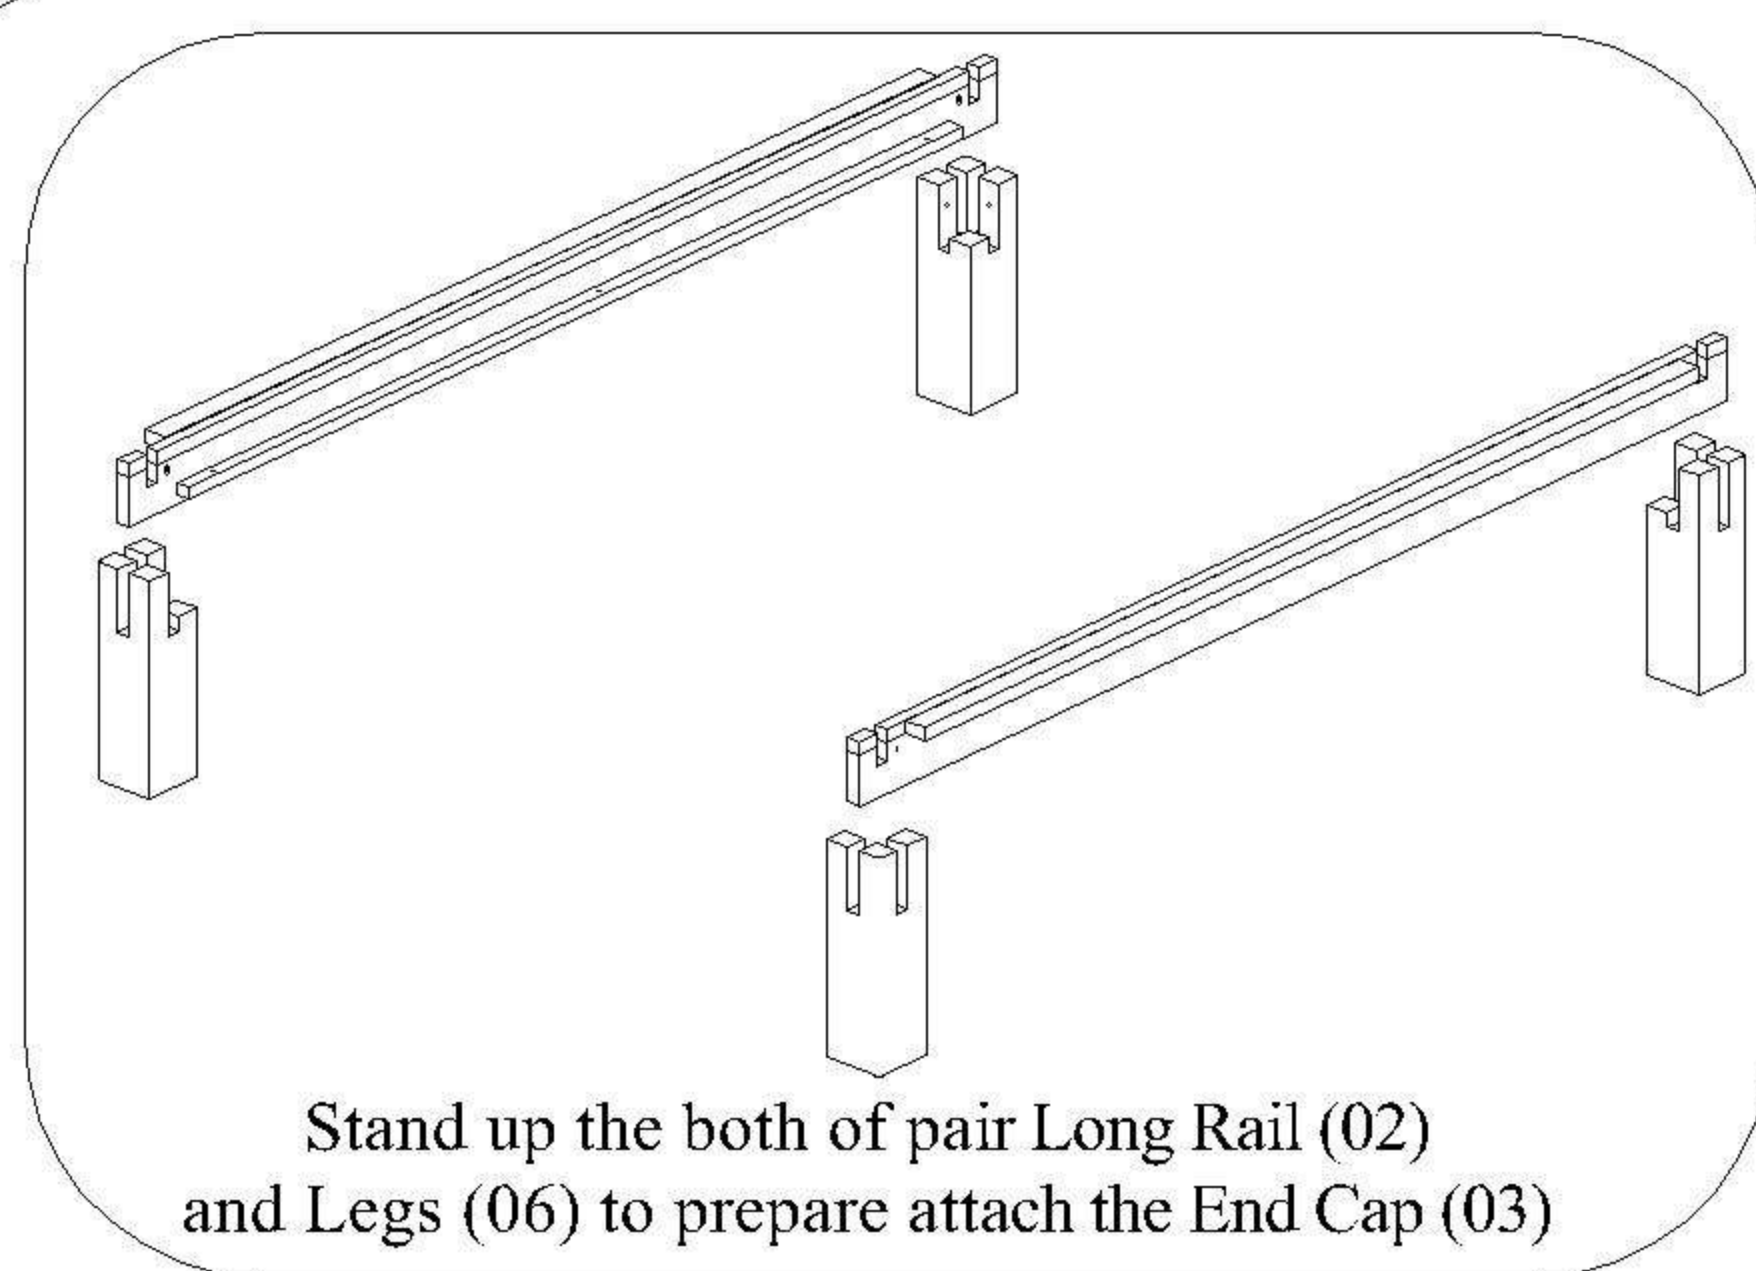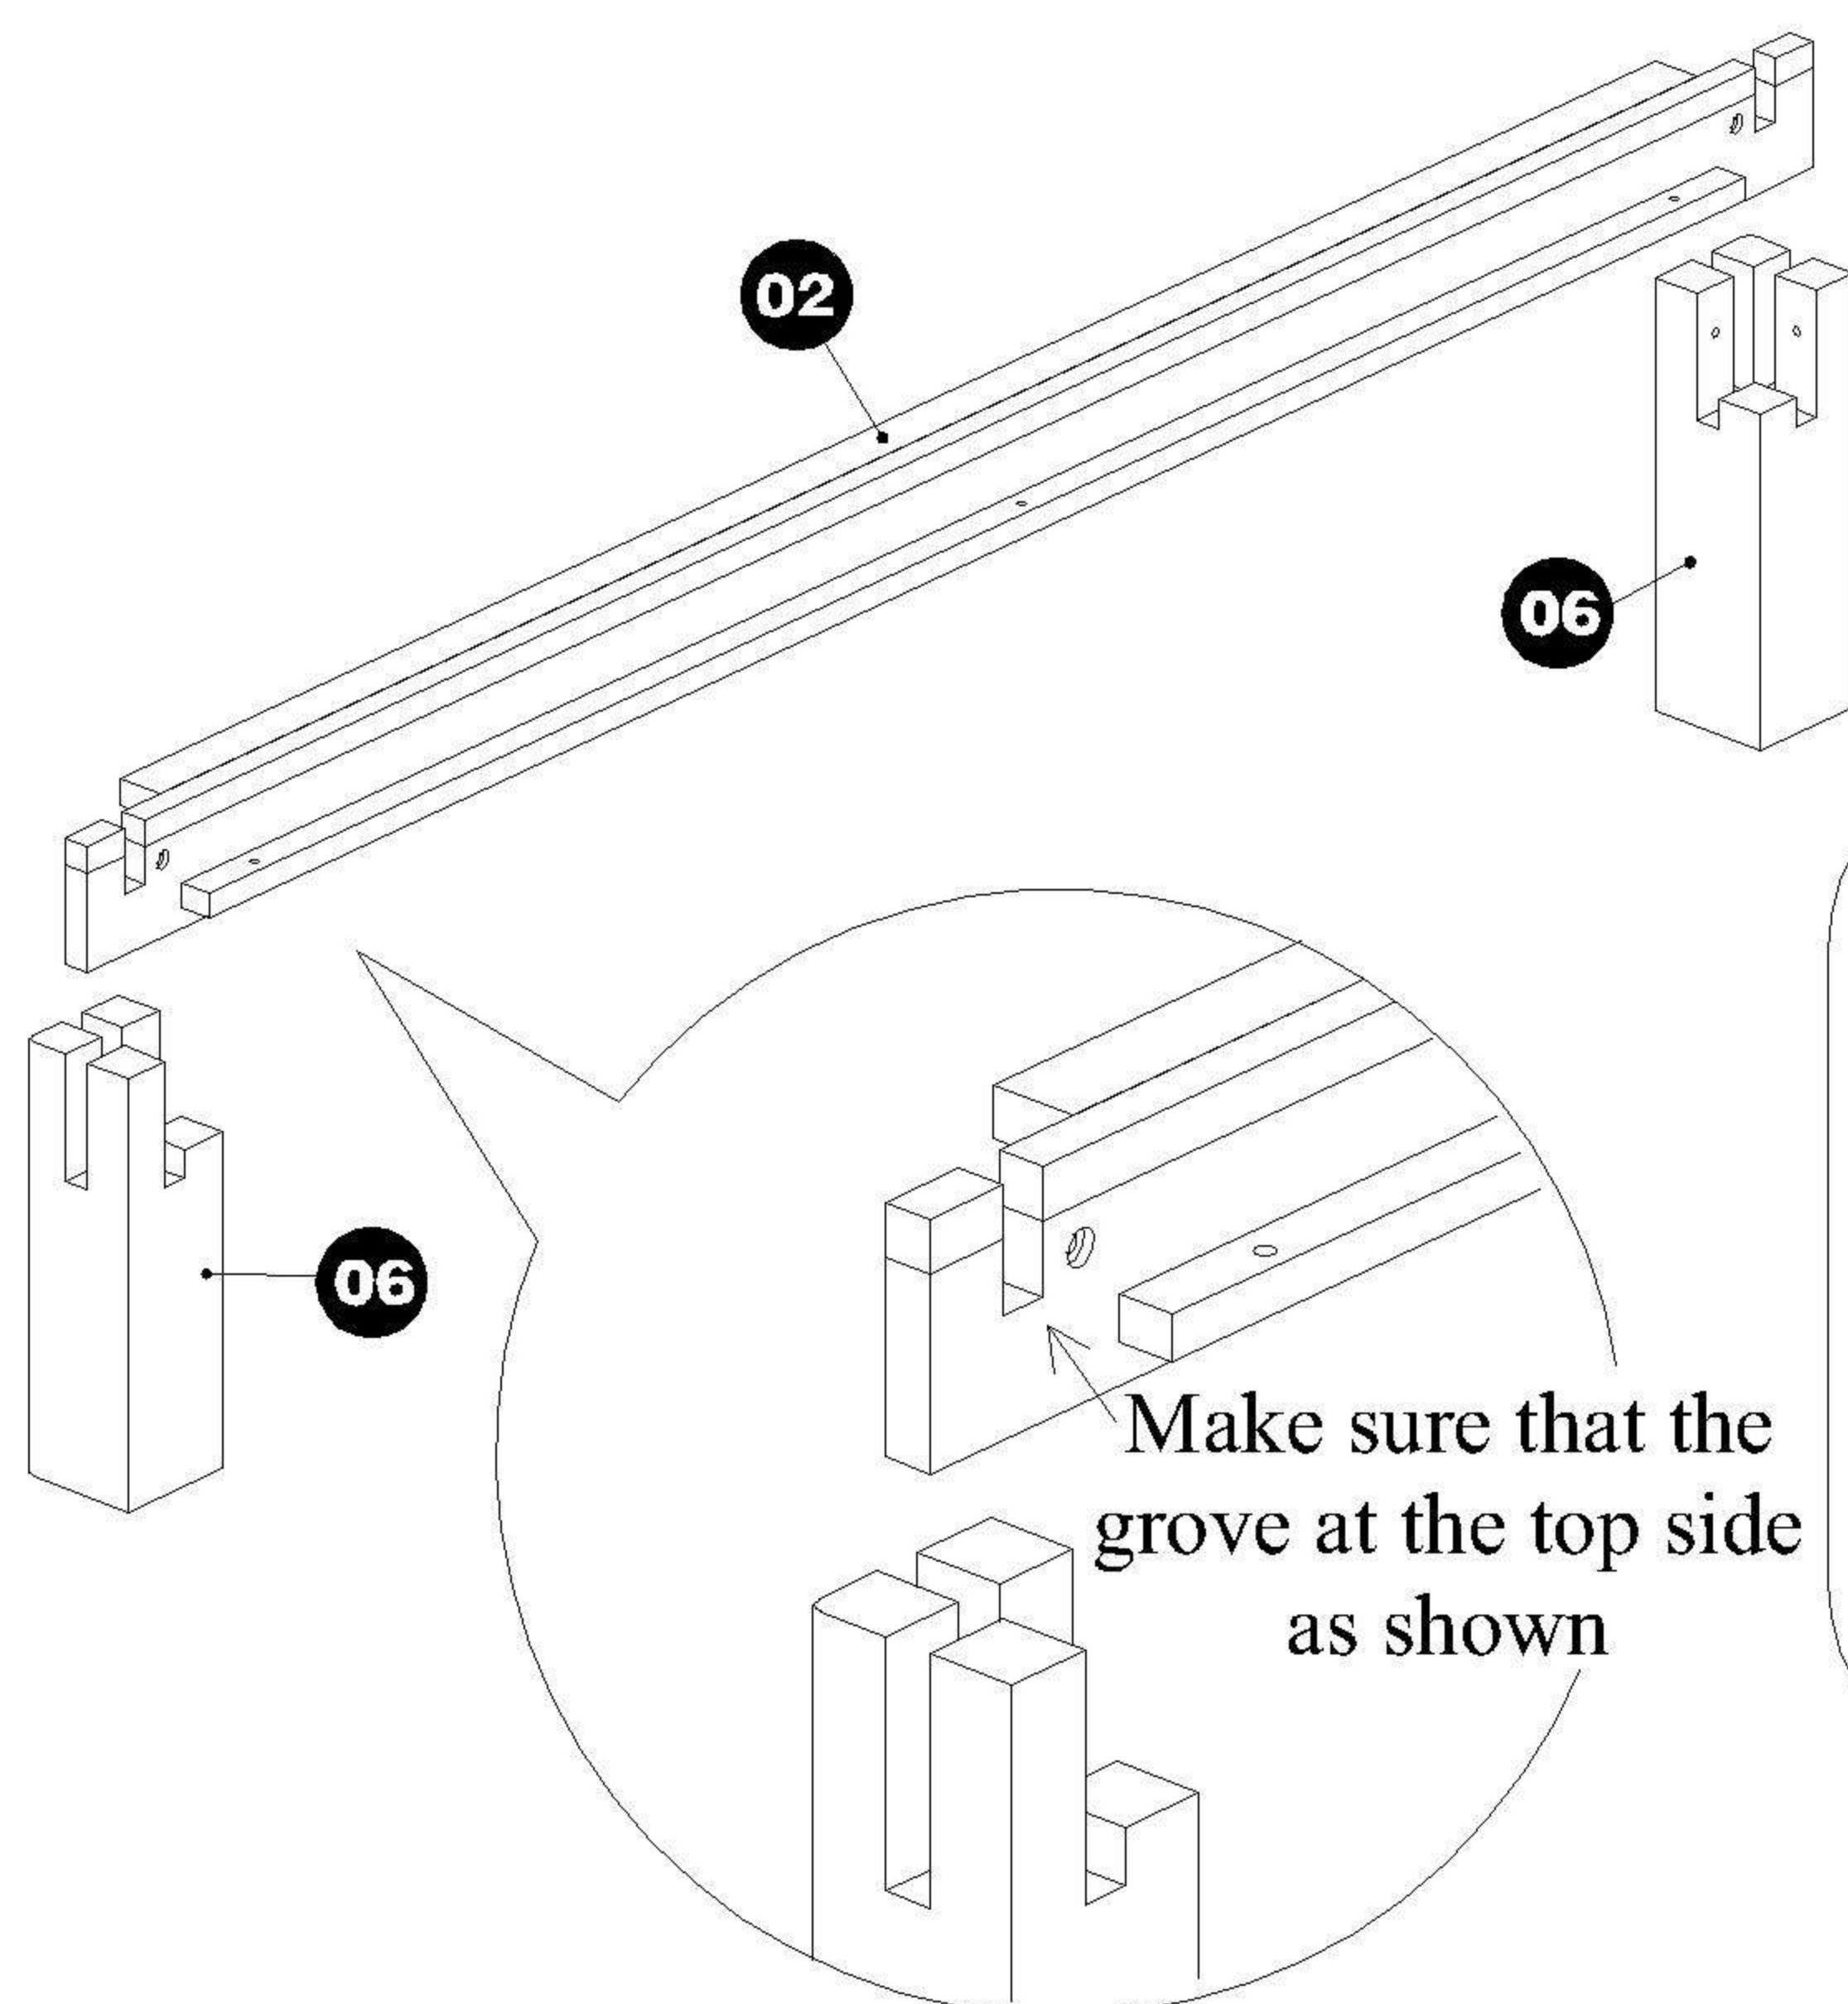


Attach the Long Rail (02) to the Legs(06), no hardware needed on this steps, see the illustration for the right directions of long rail.

STEP 3



Assembling by Adult

A



M6 Allen Bolt

B




Allen Key 4

C




Barrel Nut M6

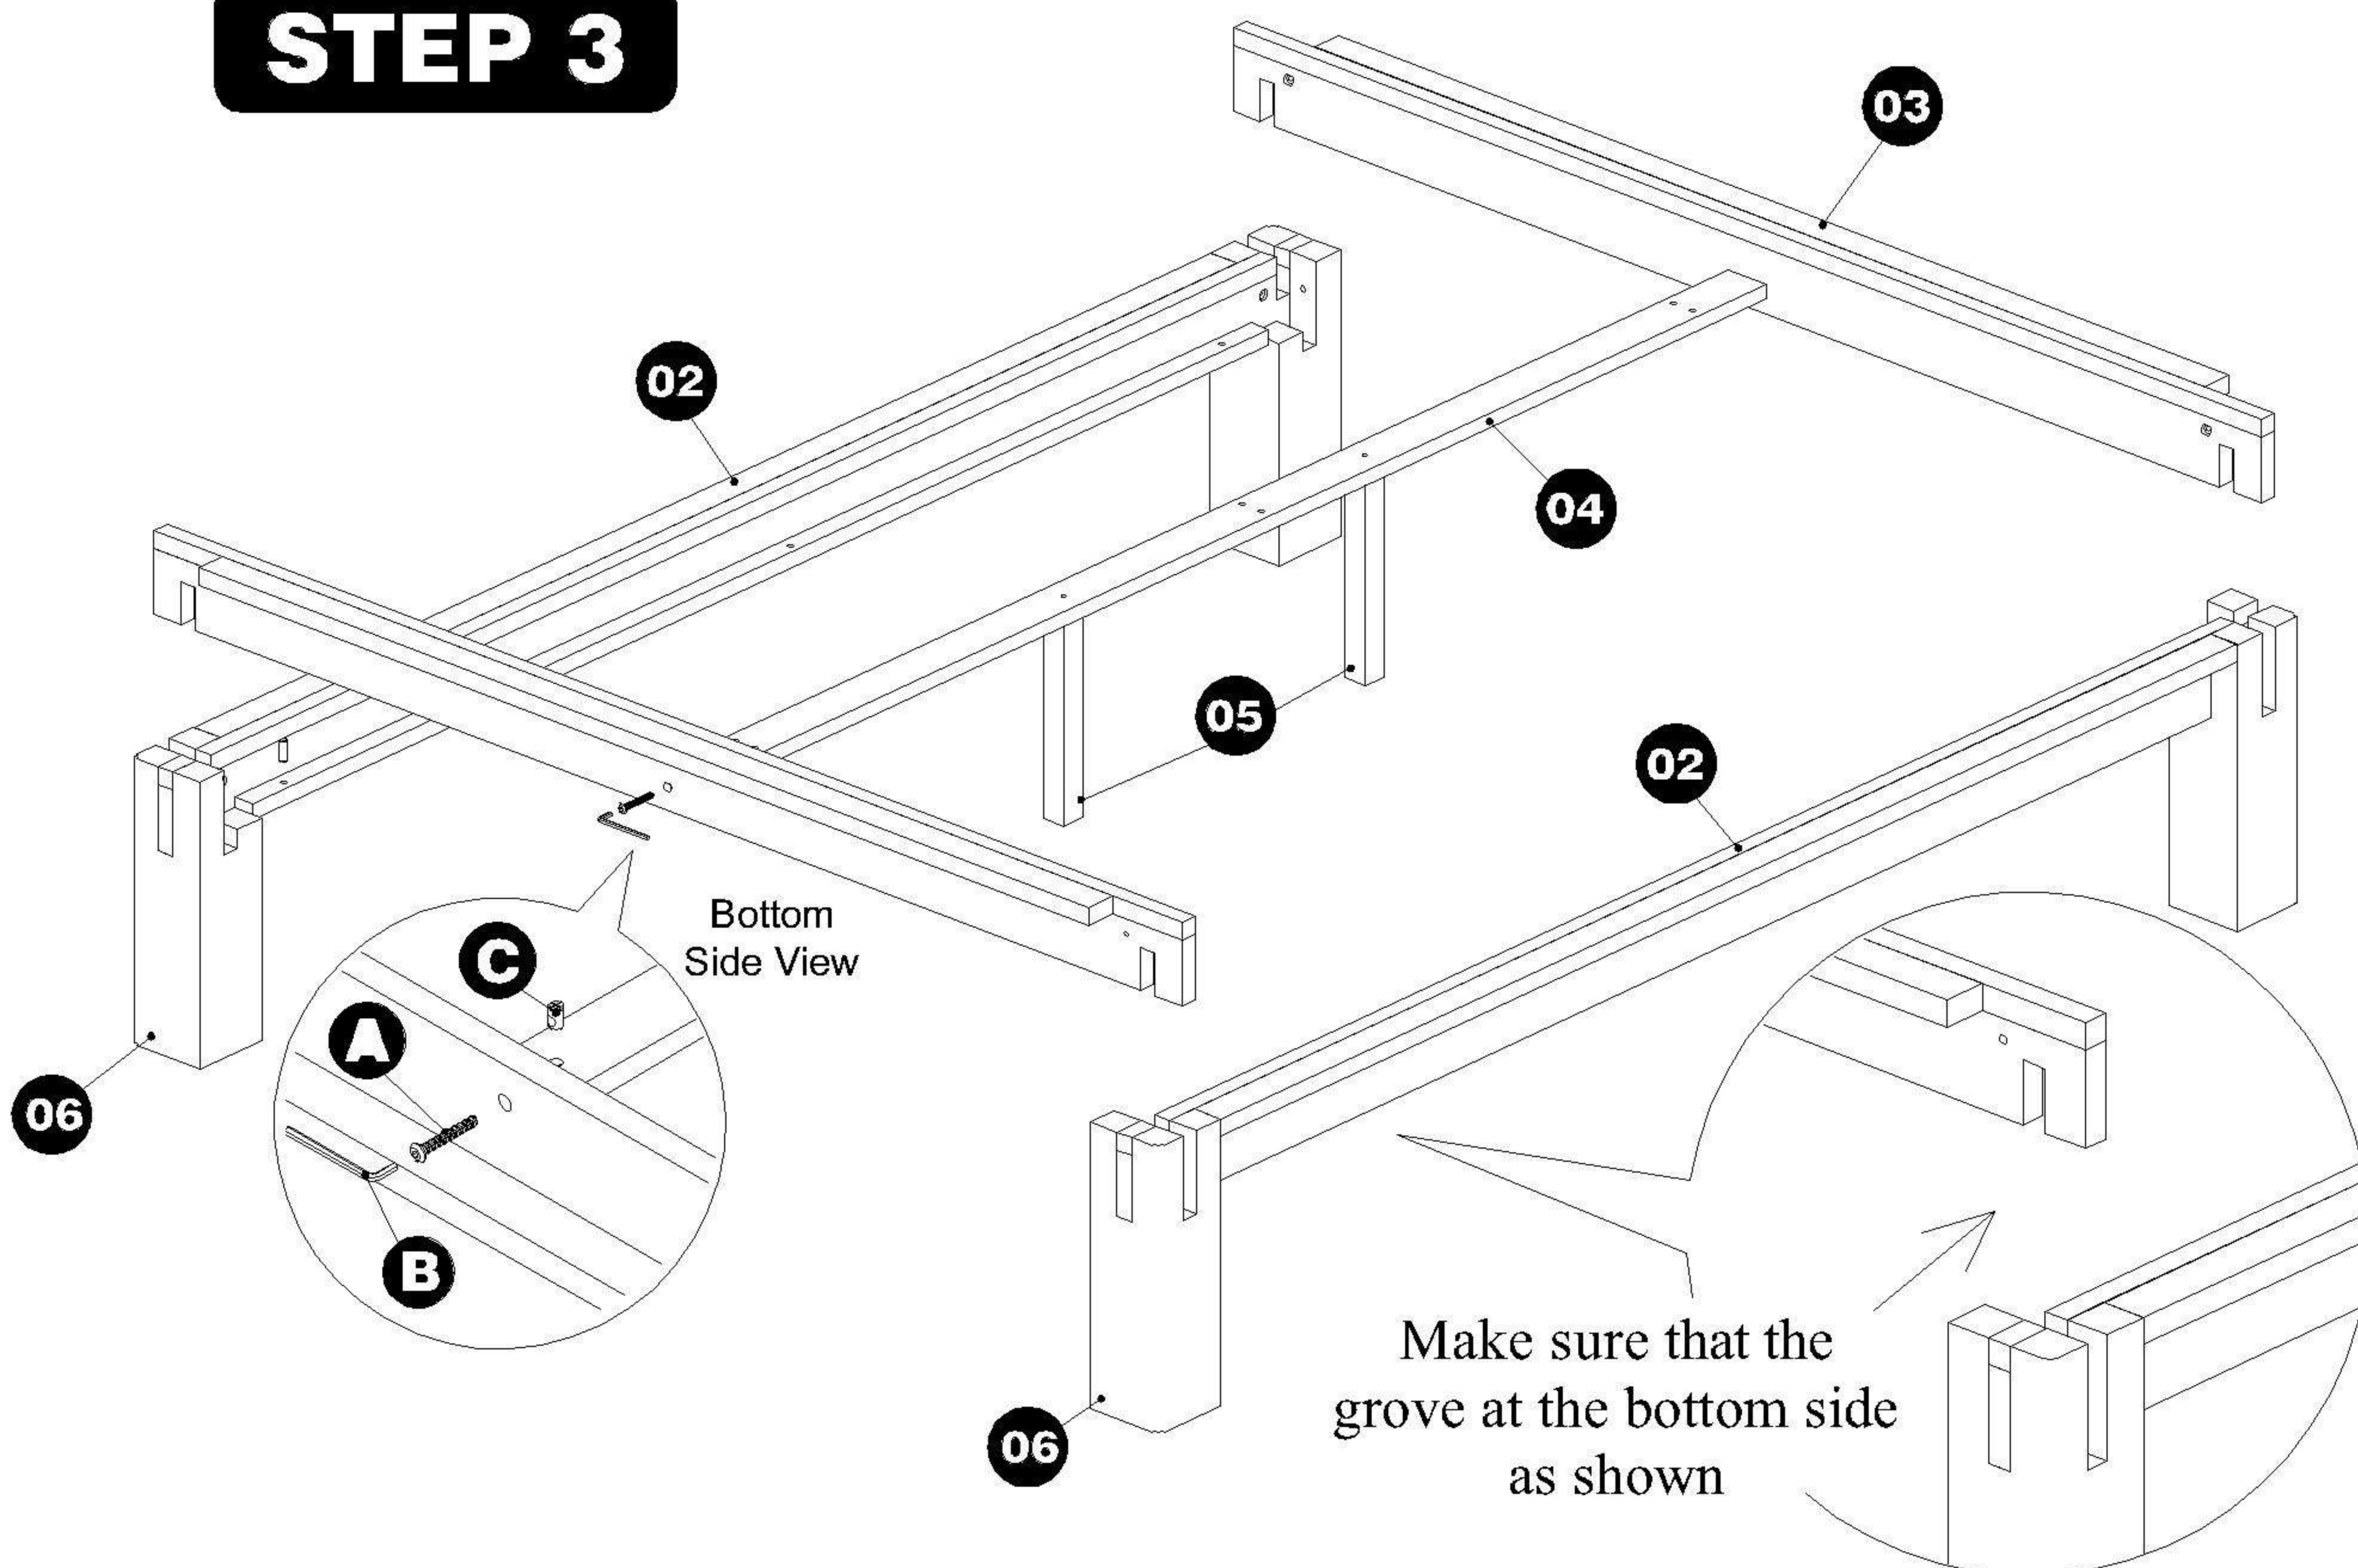

Attach the Center Support (04) and Leg Support (05) to End Cap(03), using Bolt M6 (A) and Cross Dowel (C) than tighten with Allen Key 4mm(B)

STEP 4


The ZOOM In view below shown position of wooden dowels (E) on receiving hole

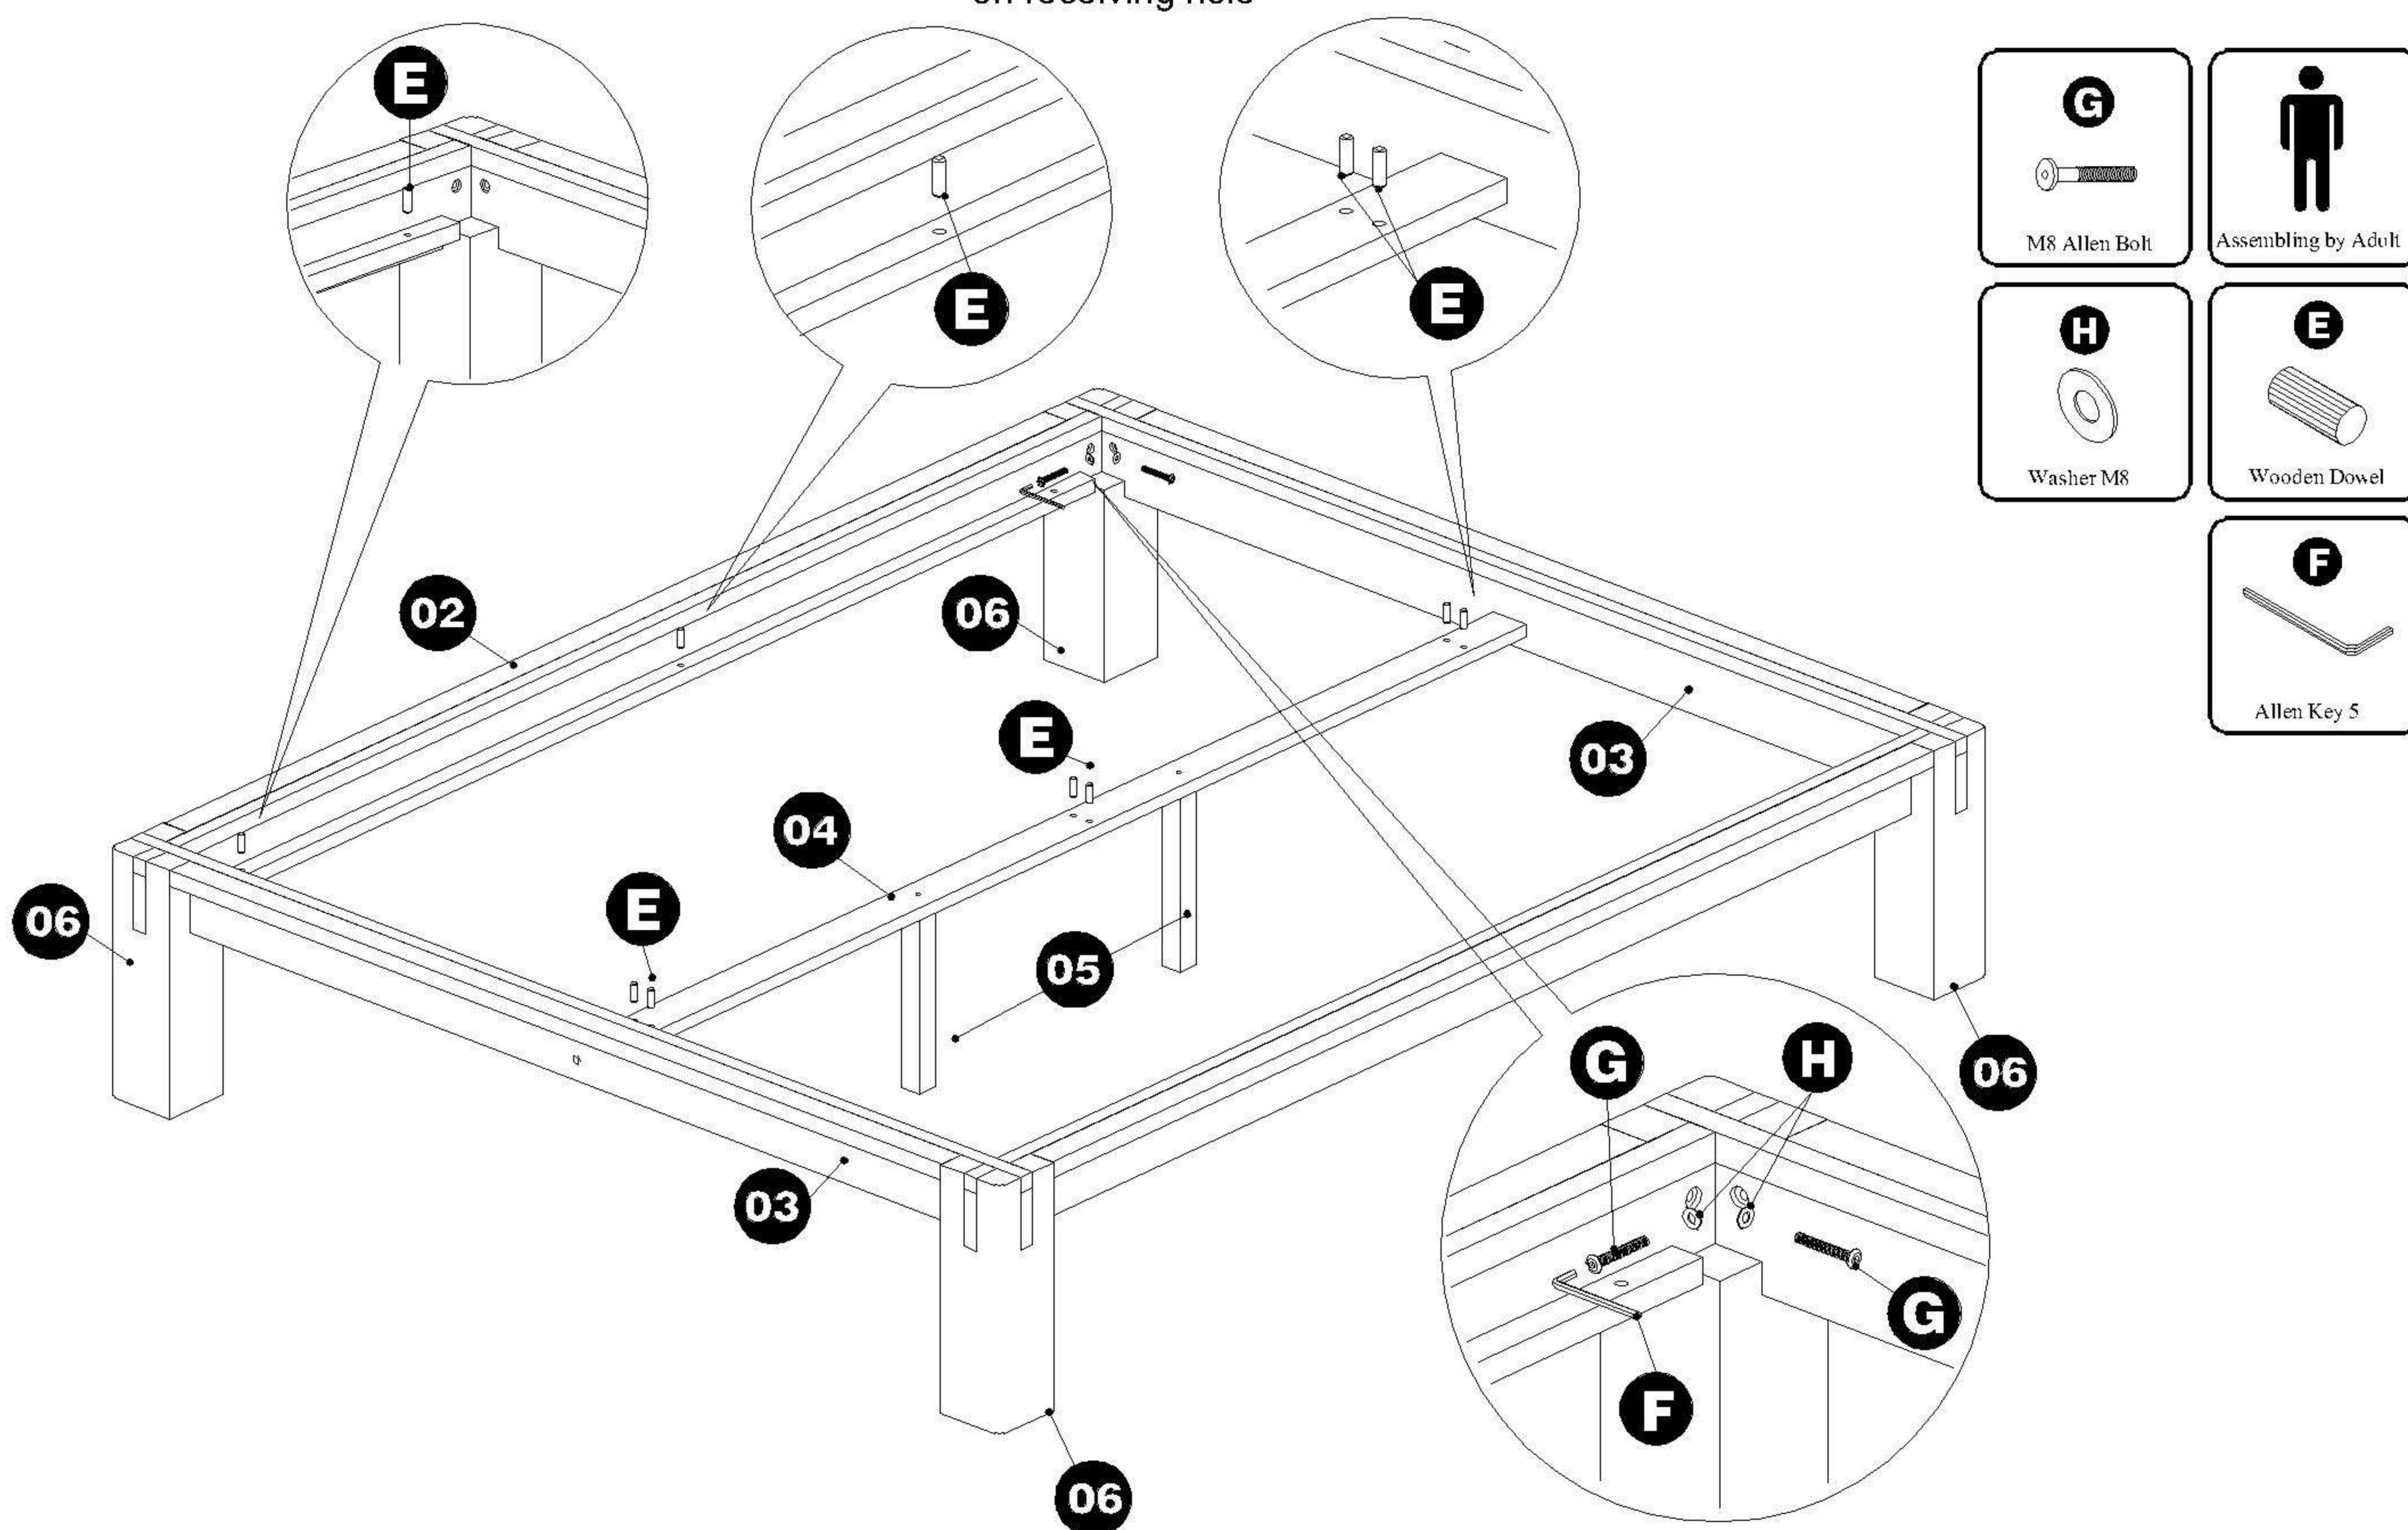

Attach the Long Rail (02) and the End Cap (03) to the Leg (06) with Bolt M8 (G) and Washer (H), using Allen Key 5mm (F) then insert Wooden Dowel 10mm (E), into the receiving hole of Long Rail (2) and Center Support (4) as shown.

STEP 5

The ZOOM In view below shown position of wooden dowel on slats assembled

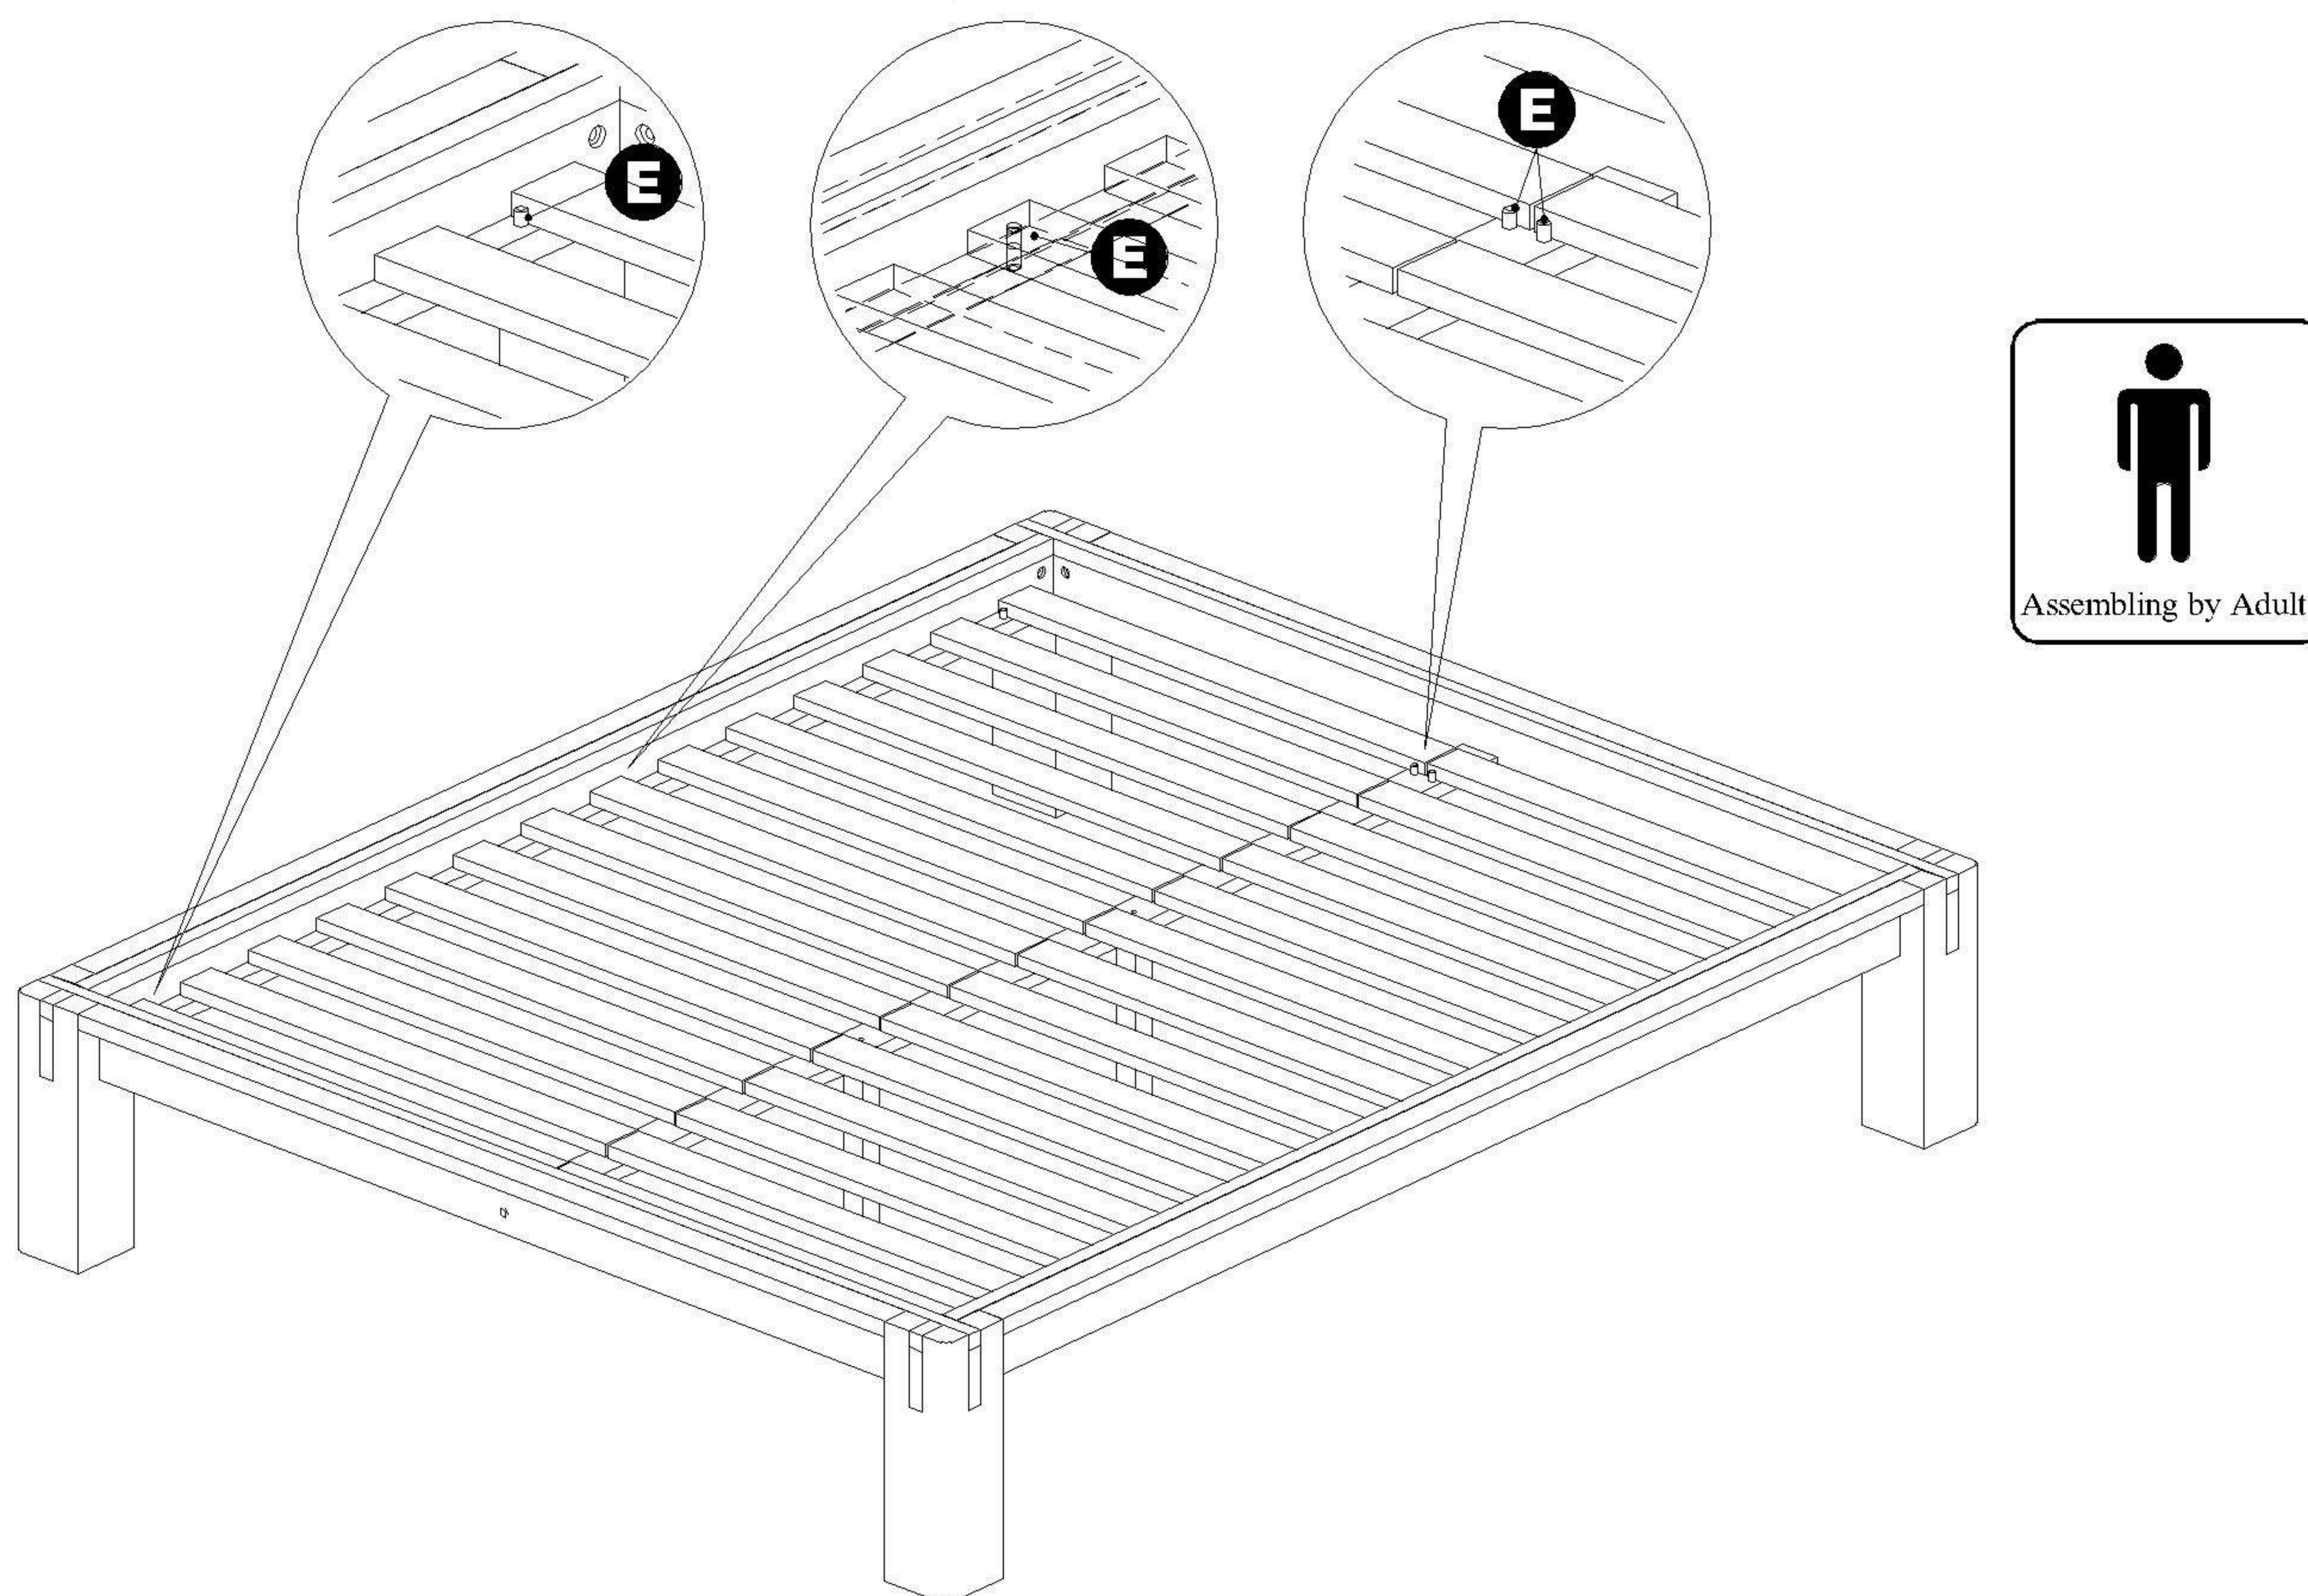

Lay the Slat Kit (07) onto the Bed, place the Slats on Wooden Dowels as the stopper.
Your Tokyo bed is now ready for use.

We recommend that you recheck that all screws are tightened
And that all parts are secure before use and periodically to ensure safety.